



BLISS RADIANT PERSONAL HEATER

USER MANUAL

Models:

THD160

THD240

THD320



TABLE OF CONTENTS

1. Important Safety Instructions
2. Specification Data
3. Application
4. Installation and Operating Instructions
 - 4.1 Castor Wheel Set
 - 4.2 Mounting Bracket
 - 4.3 Operation
5. Warranty

1. Important Safety Instructions

- **Prior to installing and operating the heater, read these instructions carefully and retain for future reference.**
- Indoor use only.
- Ensure the rated voltage is **230-240V**.
- Do not install the heater directly below a socket.
- If using mounting feet, heater should be positioned on a flat horizontal surface.
- Arrange cord away from traffic areas so that it will not be tripped over.
- Do not place cable under carpets / rugs.
- Do not remove plug from power socket by pulling the supply cord. Always grip plug.
- Do not operate this appliance if the cable or plug becomes damaged.
- In case of heater fault or damaged supply lead, the appliance should be returned to the distributor / manufacturer for repair.
- Ensure the appliance is switched OFF before connecting to the mains power supply.
- Do not cover heater in any manner, as the appliance may overheat and become a fire risk.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- Switch off the power supply and unplug from the mains socket when not in use, before cleaning or changing accessories.
- Do not immerse in liquid or allow liquid into the interior of the appliance, as this could create an electric shock hazard.
- Do not reach for an appliance that has fallen into water. Switch off at supply and unplug immediately.
- Do not operate appliance with wet hands. Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.

BLISS



RADIANT PERSONAL HEATERS

- Do not cover. NEVER use the heater to dry clothes or similar articles.
- Do not position the appliances close to curtains or other combustible materials. Keep combustible material such as furniture, cushions, bedding, paper, clothes, curtains etc. at least 1.0m away from the heater.
- This appliance heats up when in use. To avoid burns, do not let bare skin touch hot surface. Switch off and let cool down before moving. Store the heater in a cool, dry location when not in use.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

2. Specification Data

Model	Power (W)	Voltage (V)	Dimension (mm)	Rating
THD 160	160W	230-240V	540 x 380 x 25mm	IP44
THD 240	240W	230-240V	800 x 380 x 25mm	IP44
THD 320	320W	230-240V	1080 x 380 x 25mm	IP44

3. Application

The BLISS range of personal heaters offers essential personal comfort and energy savings for anyone who sits at a desk or workstation.

The THD 160 model is ideal for heating an individual at a single desk or workstation, and is supplied with castor wheels for portability.


The THD 240 and THD 320 models are suitable under desk heating as well as localized heating applications, and are provided with both castor wheels and surface mount brackets.

4. Installation and Operating Instructions

4.1 Castor Wheel Set

For portability, a castor wheel set is provided with each heater. This is easy to assemble, using the 2 screws supplied on the heater base.

- Firstly, remove the 2 screws found on either side of the heater base.
- Position the castor wheels over the screw locations and screw them to the bottom of the heater.

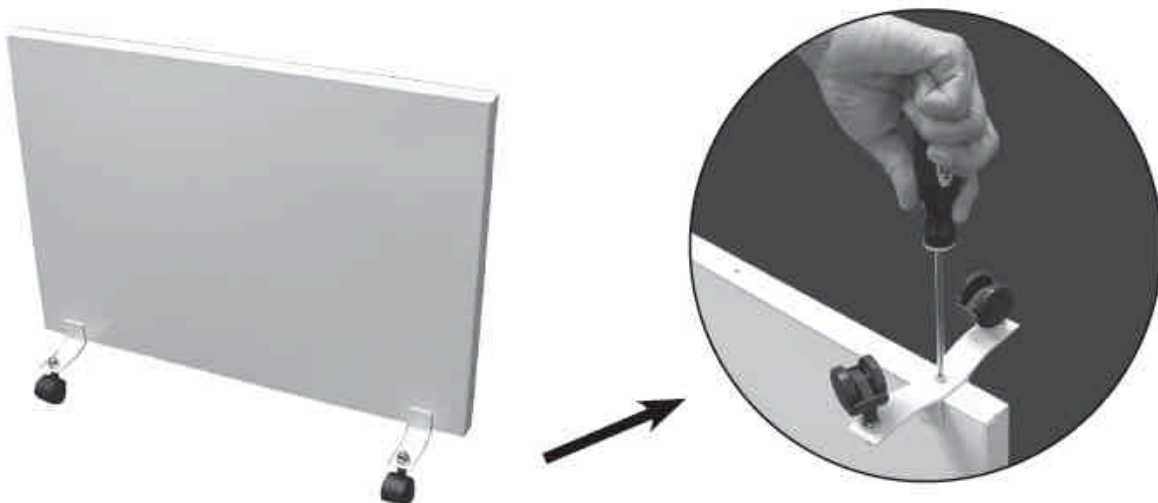

Once the castor wheels are fixed to the heater base, the heater can be moved anywhere to provide energy efficient personal comfort.

BLISS



RADIANT PERSONAL HEATERS

Note: The power cord should be on the bottom side of the heater.



4.2 Surface Mounting

The THD 240 and THD 320 model heaters are suitable for wall or ceiling mounting.

The mounting bracket has 4 holes. Position the bracket in the desired location and mark the mounting hole positions on the mounting surface. (Make sure the bracket is square and in line.)

Install the fixing devices. (Make sure the fixing devices are more than capable of safely securing the heater.) The fixing devices should be suitable for the type of mounting surface; plaster, timber, brick etc.

Remove mounting screws from the heater. There are 2 on the top, and 2 on the bottom. Locate the heater in the mounting bracket. Fix heater to the bracket using the 4 screws provided.

Note: For wall mounting, the power cord should be on the bottom side of the heater.



4.3 Operation

Plug in the heater and make sure the operating light is in the 'ON' position. The neon switch will illuminate.

5. Warranty

BLISS heaters have a FIVE (5) YEAR REPLACEMENT WARRANTY*.

To claim for Warranty, please retain your receipt as proof of purchase and return the faulty heater to the place you purchased it.

Warranty does not apply to heaters which have been misused or used in conditions other than those for which they were intended for. Nor will it apply in the event of damage or accident resulting from negligence, lack of care or maintenance, or if the heater has been modified in any way.

Thermofilm Australia Pty Ltd reserve the right to reject any Warranty claim deemed to be false.

Retailers must have Warranty claims authorised by Thermofilm Australia. Ph 03 9562 3455

* Conditions apply. Please refer the Thermofilm standard terms of sale and warranty for details.